


USAHI Window Measurement Form Instructions

1. Draw the perimeter layout of the home in the designated area. If there are two floors, draw the layout within the first-floor layout.
2. **Always** start marking the openings with the Front Door being number #1 and continue counting to the right of the Front Door (when facing the Home).
3. Make sure to mark every opening in the Home regardless if we are changing or not (Garages included). Either a number or NC. Sidelites that are connected with the door are considered x1 opening but if it is a stand-alone sidelite it is it's own opening.
4. Do Not assign a number to the opening that is not being changed. Just mark it as NC on the sketch and continue the numbers on the next opening.
5. When marking the sizes of the openings, always write what the Customer is getting now, NOT what is existing.
6. If there are more than x10 openings, continue numbering on a new page.
7. Refer to example or call Christine or Josef with any questions.

Make sure to **COMPLETELY** fill out the form including the Job info as well as the Brand, Frame and Tint Color.



Brand: ES	Customer: Window Test
Color: White	Job #: 123456
Tint: Grey	Phone: (954) 123-4567

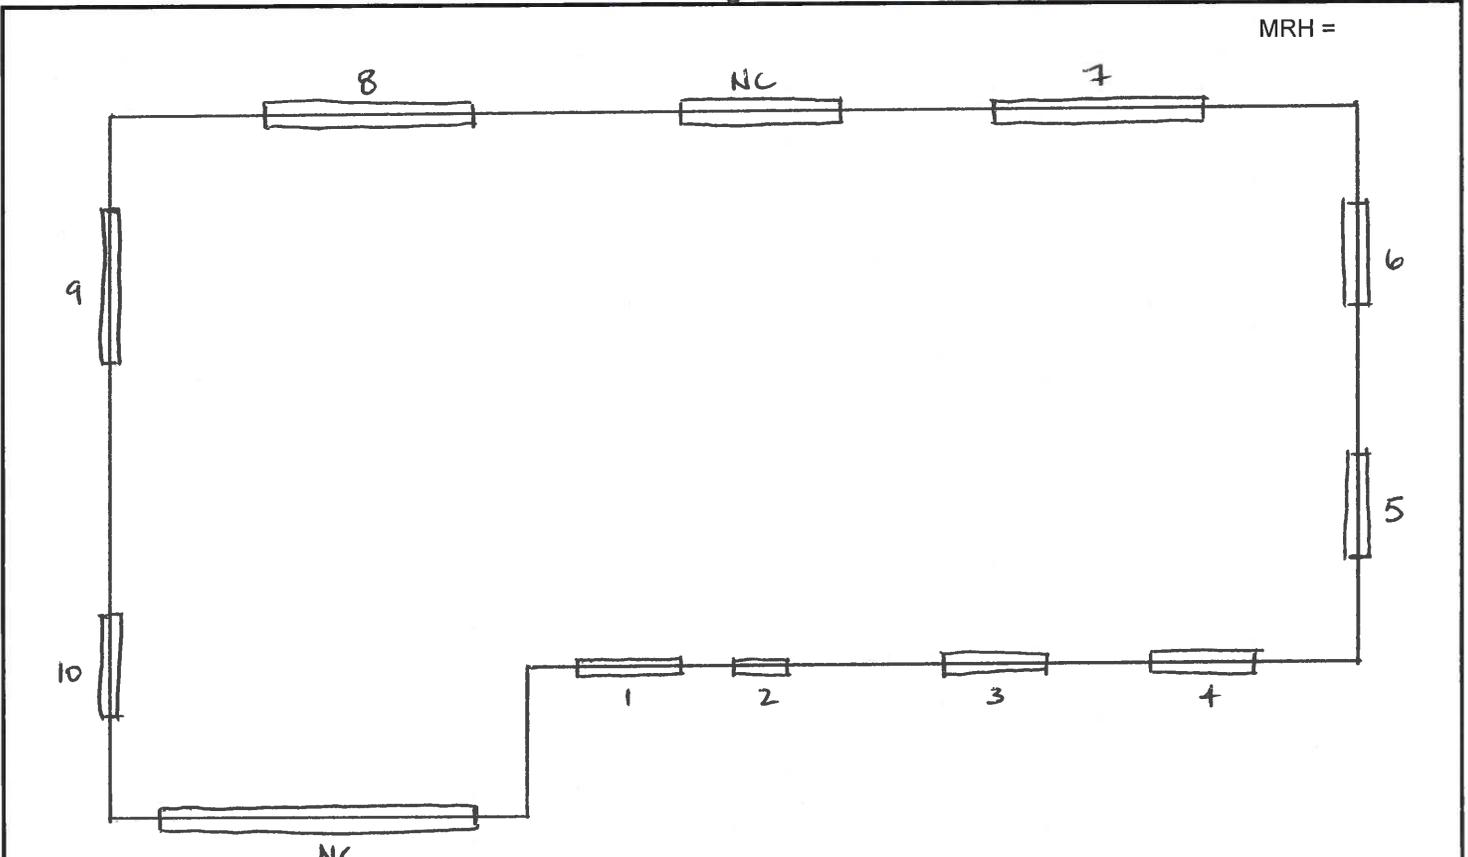

*This Engineering Form is a legally binding extension to the Master Home Improvement Agreement.

**All Openings Approved on Engineering:

Customer Signature: _____

Date: _____

#	Width	Height	Type	Draw	#	Width	Height	Type	Draw
1	36	80	FRNT		6	54	36	HR	
Initial					Initial				
Thermatru									
2	18	80	SL		7	108	80	SGD	
Initial					Initial				
Fixed Sidelite									
3	32	26	SH		8	108	80	SGD	
Initial					Initial				
4	32	26	SH		9	48	36	HR	
Initial					Initial				
5	48	36	HR		10	32	80	FD	
Initial					Initial				
					ES - Single French Door				